

VIN:                    XXXXXXX    Vehicle:                MINI/F56/HAT/Cooper/B38/AUTO/USA/LL/2014/11

System Version:    3.47.10.13054    Data Version:    R3.47.10.13054

---

52 26 005                    Removing and installing / replacing rear seat



Removal:



Firmly pull rear seat (1) on the front upwards.  
Remove rear seat (1) and feed out seat belt (2) at the same time.



Installation:



Replacement:  
Remount Isofix covers.

Feed in seat belt (2) and seat belt buckles (3) through the opening on the rear seat (1).  
Press rear seat (1) downwards.  
Rear seat (1) must be felt and heard to engage.

