


PROCEDURE

REP 72 12 000 "Removing and installing or replacing airbag module on passenger's side"


Preliminary Work:

Removing and installing/replacing cover for instruments

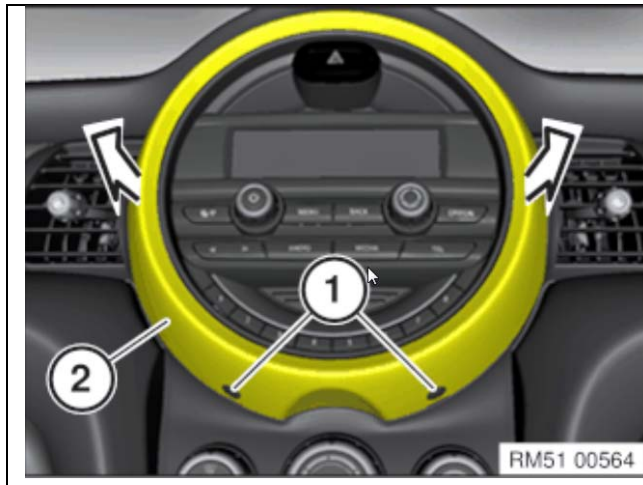

- Pull out clips (1).
- Release cover (2) from latch mechanisms in direction of arrow and remove.


Removing and installing (replacing) central instrument

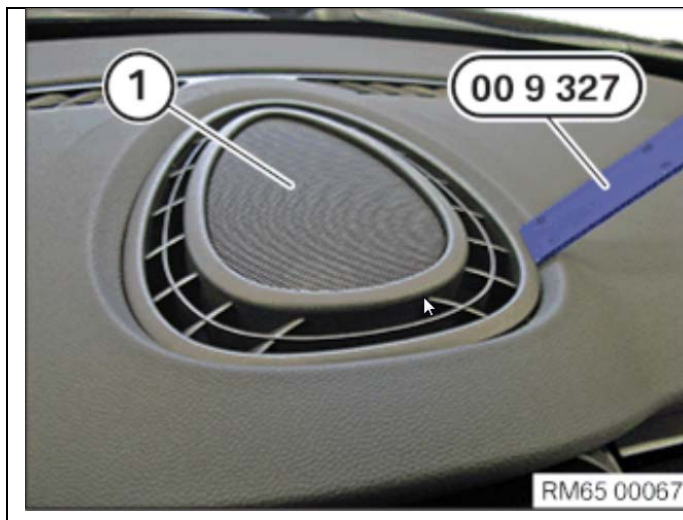


- Unclip and remove cover (1) upwards with special tool [00 9 327](#)



- Release screws (1).

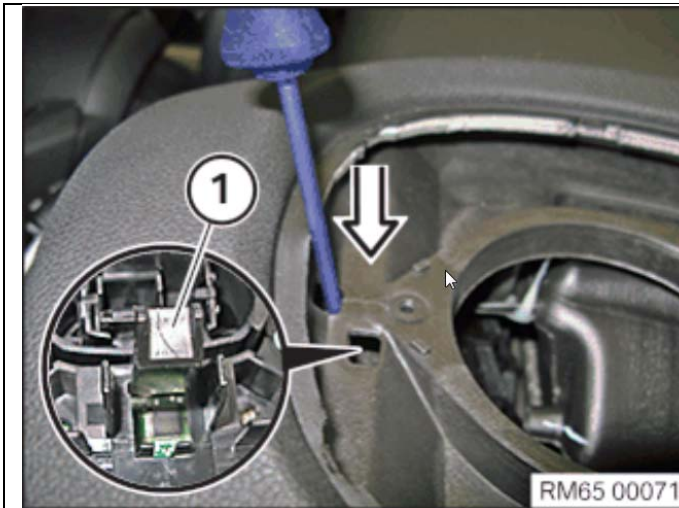


- Unlock lock (1) with screwdriver in direction of arrow and at the same time pull central instrument towards passenger compartment.

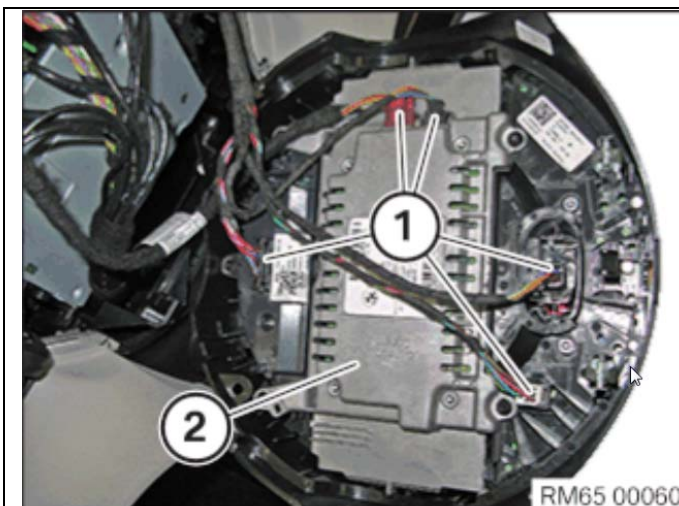


- Unlock plug connections (1) and disconnect.
- Remove central instrument (2).

Removing and installing (replacing) centre right fresh air grille

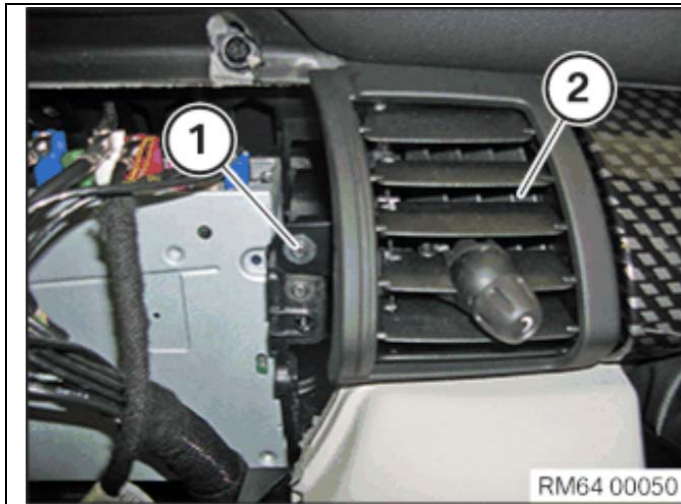


- Release screw (1).
- Pull off fresh air grille (2) forwards.

Removing and installing/replacing upper instrument panel storage compartment

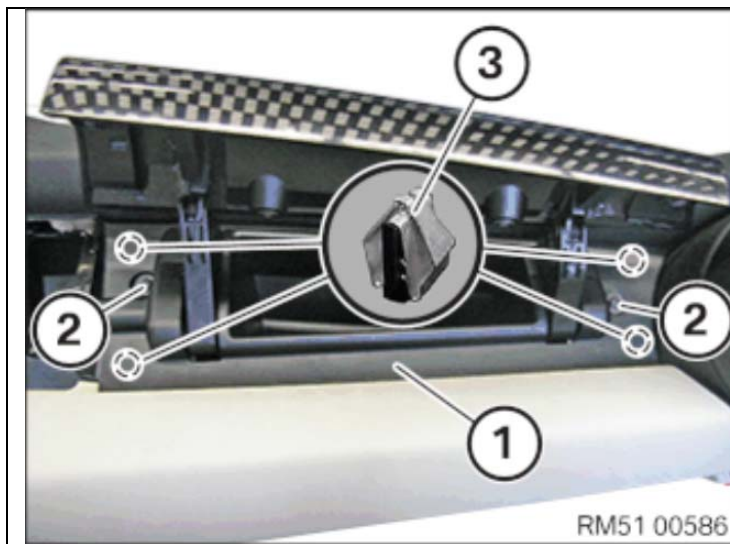

- Open storage compartment (1) and release screws (2).
- Release storage compartment (1) inwards out of clamp (3).
- Close and feed out storage compartment (1).

Removing and installing instrument panel trim

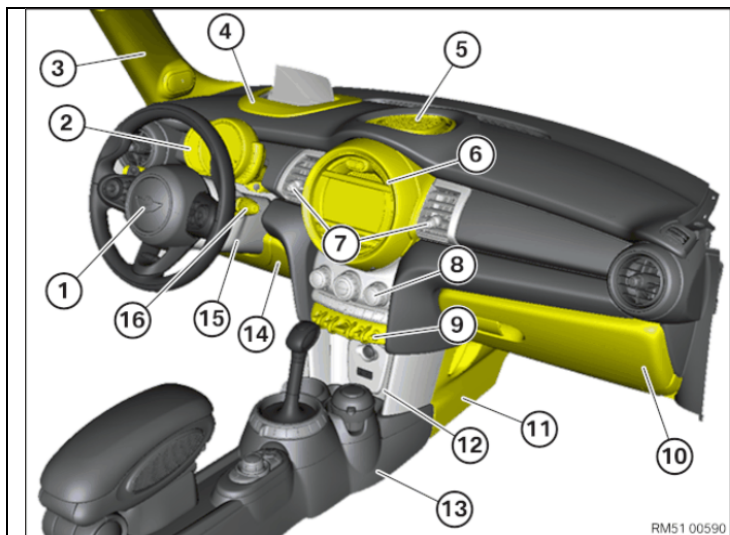

- The following parts must be removed as preliminary work.
- For version with head-up display make sure that head-up display is retracted.


Removing and installing/replacing airbag unit




- Insert Torx screwdriver T25 (1) into the 3 openings on the back of the steering wheel and press until the airbag unit has unlocked.

Note:

- Refer to the next graphic for improved depiction of unlocking.

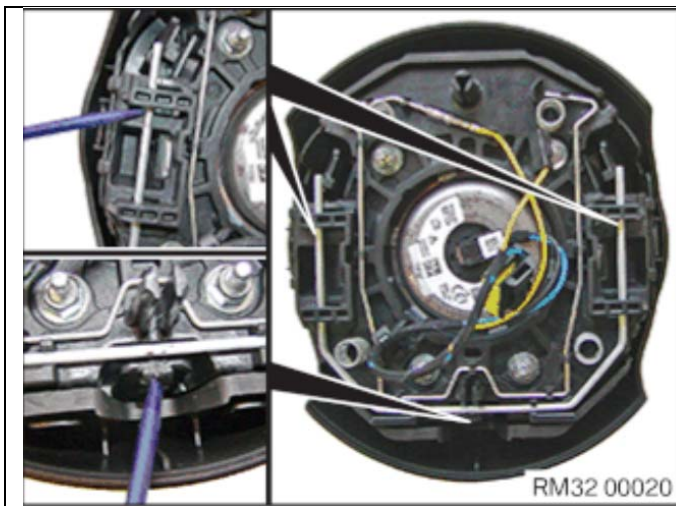

- Depiction of the locking points on the airbag unit.

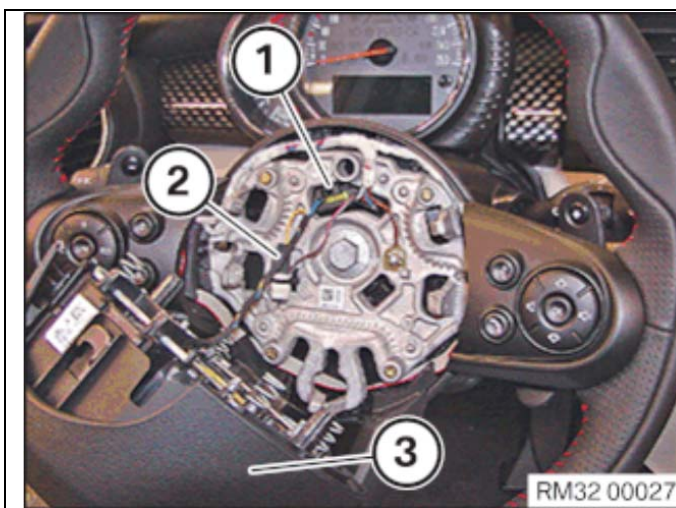


- Disconnect plug connections (1) and (2).
- Remove airbag unit (3).

Warning!


Danger of injury!

- Airbag unit may only be set down with the airbag itself facing upwards.

Removing and installing instrument cluster

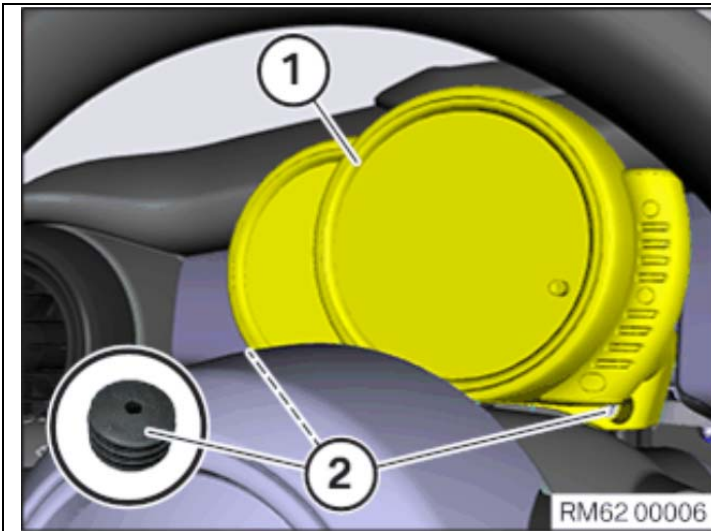


- Lever out plugs (2) with suitable tool (e.g. screwdriver Tx15).
- Release screws behind.
- Pull off instrument cluster (1) in direction of steering wheel.

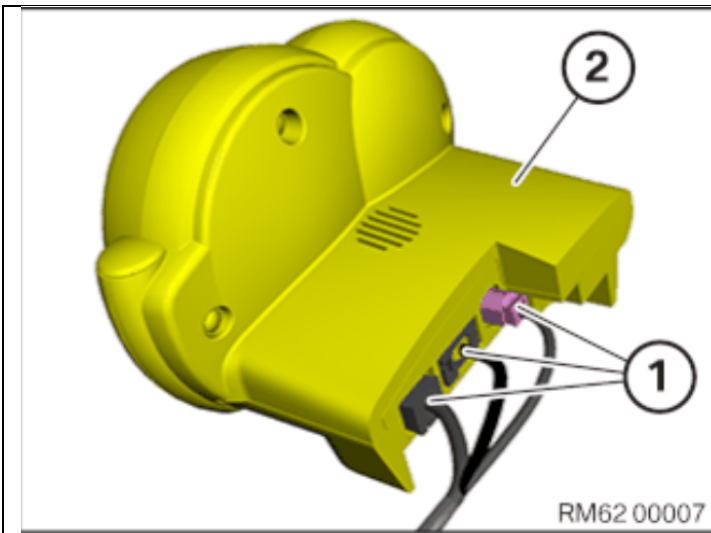


- Disconnect connector (1) and remove instrument cluster (2).

Removing and installing or replacing trim for roof pillar at front (A-pillar), left or right

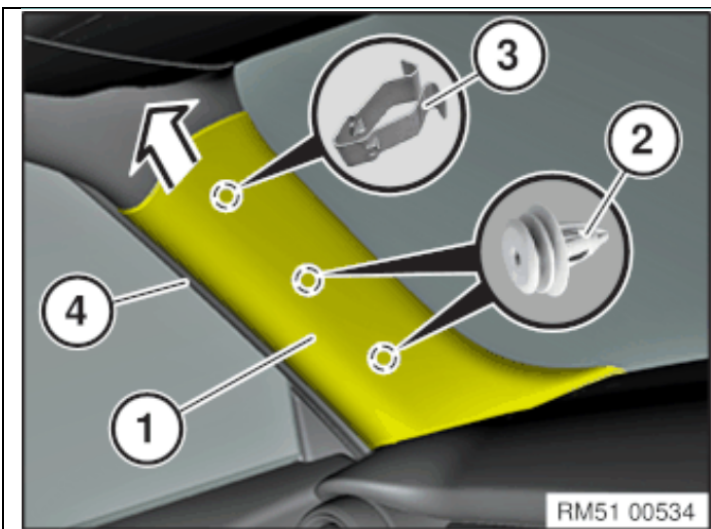


- Release trim panel (1) from clips (2) and release upwards out of clamp (3).
- Unlock and disconnect associated plug connections, according to the equipment.

Removing and installing/replacing trim for Head-Up Display

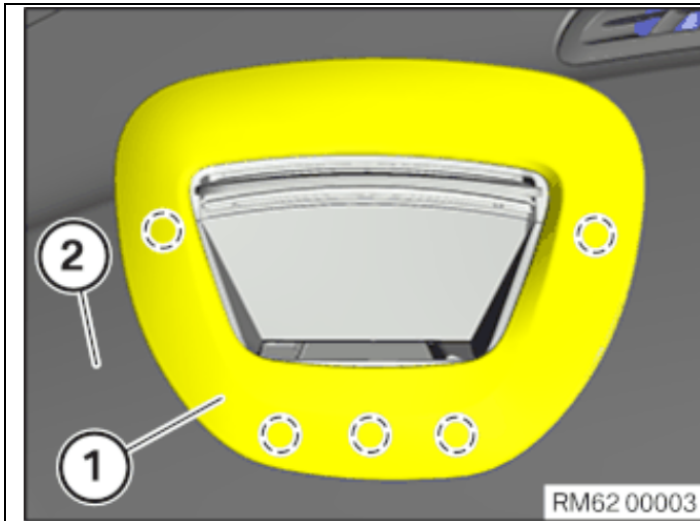


- Release cover for head-up display (1) from retaining clips with special tool [00 9 325](#).
- Feed out cover for head-up display (1) from instrument panel trim (2) and remove.

Removing and installing/replacing speaker (mid-range speaker, in instrument panel)

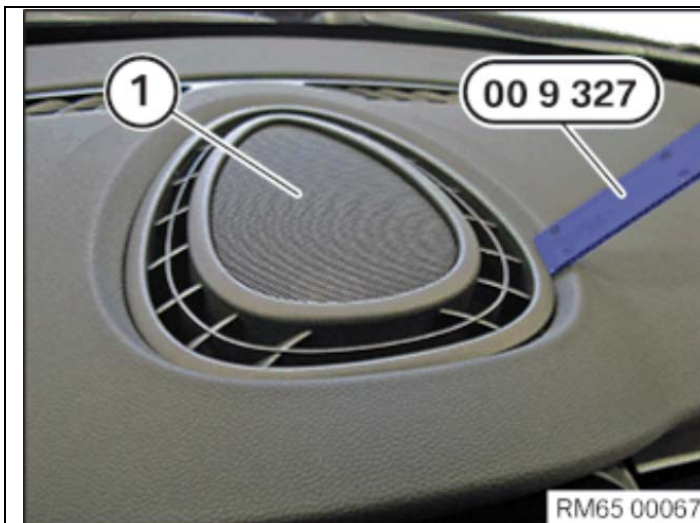


- Unclip and remove cover (1) upwards with special tool [00 9 327](#).

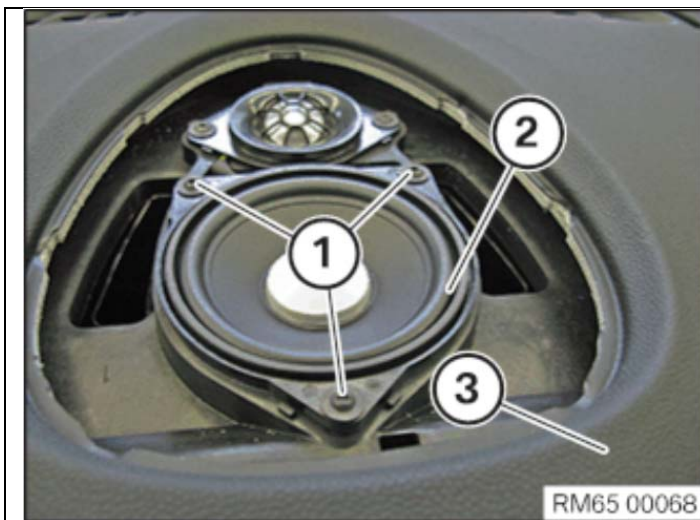

- Release screws (1).
- Remove mid-range speaker (2) upwards from dashboard (3).
- Disconnect plug connections underneath.
- Remove mid-range speaker (2).


Removing and installing (replacing) central instrument

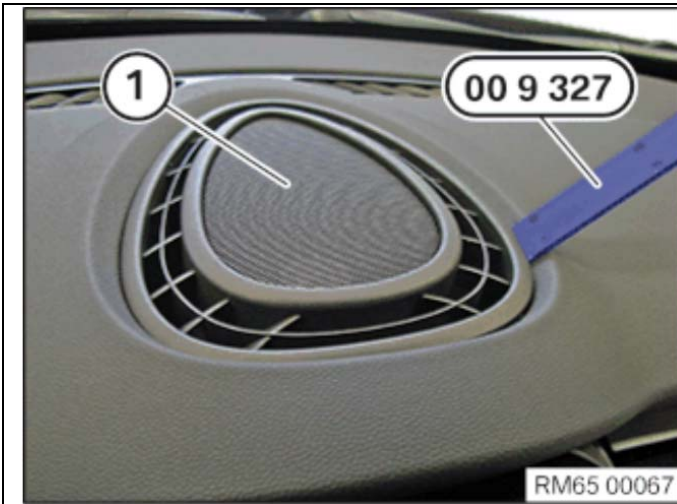


- Unclip and remove cover (1) upwards with special tool [00 9 327](#).



- Release screws (1).

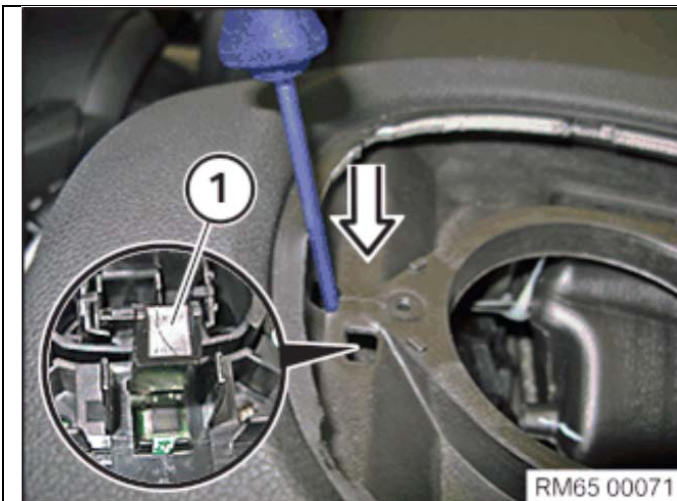


- Unlock lock (1) with screwdriver in direction of arrow and at the same time pull central instrument towards passenger compartment.

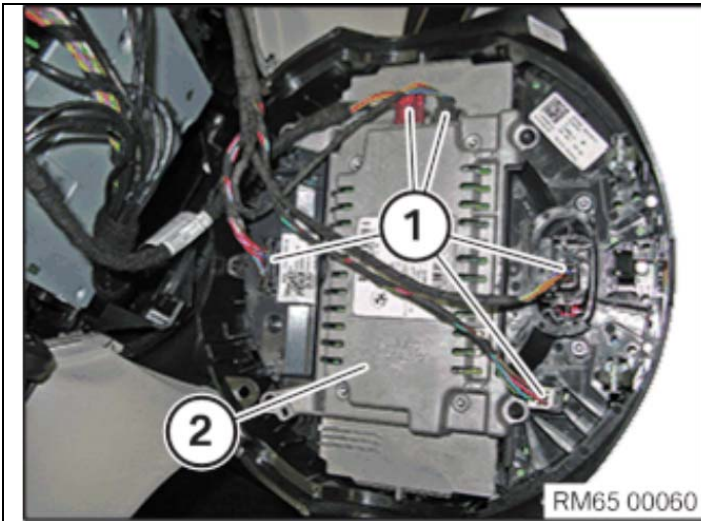


- Unlock plug connections (1) and disconnect.
- Remove central instrument (2).

Removing and installing (replacing) centre left / right fresh air grille

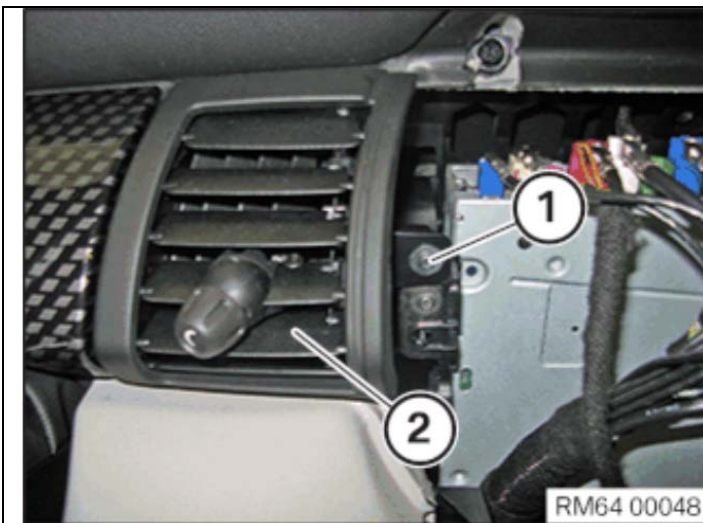

- Release screw (1).
- Pull off fresh air grille (2) forwards.

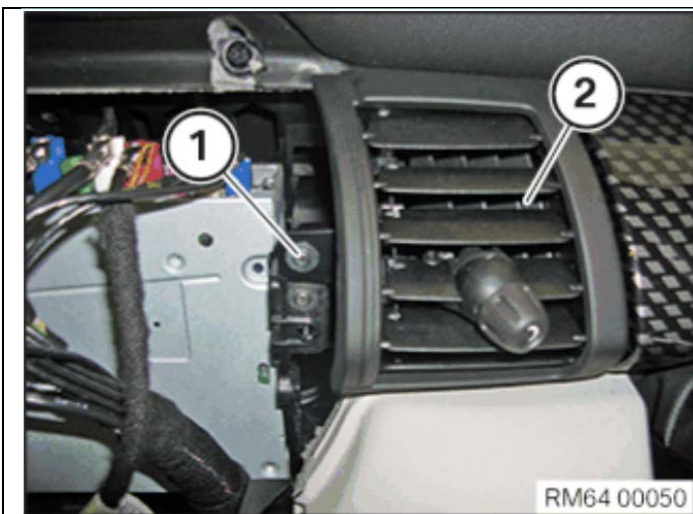


- Release screw (1).
- Pull off fresh air grille (2) forwards.

Removing and installing (replacing) control panel for heating and air conditioning system




- Disengage control panel for heating and air conditioning system (1) towards the front.

Removing and installing/replacing centre console control panel

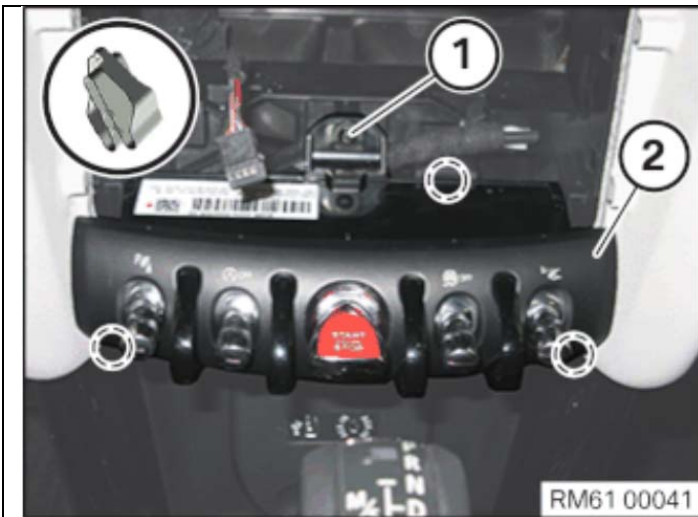


- Release screw (1).
- Unclip centre console control panel (2) from centre console.

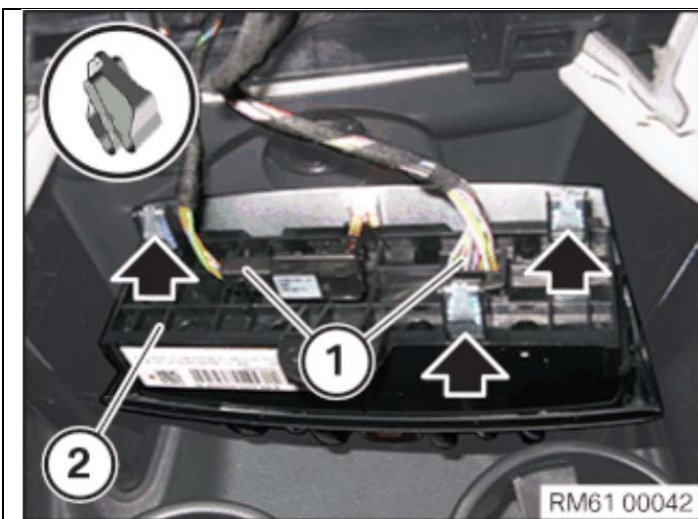


- Unlock and disconnect connector (1) on centre console control panel (2).

Removing and installing/replacing right glove box with housing

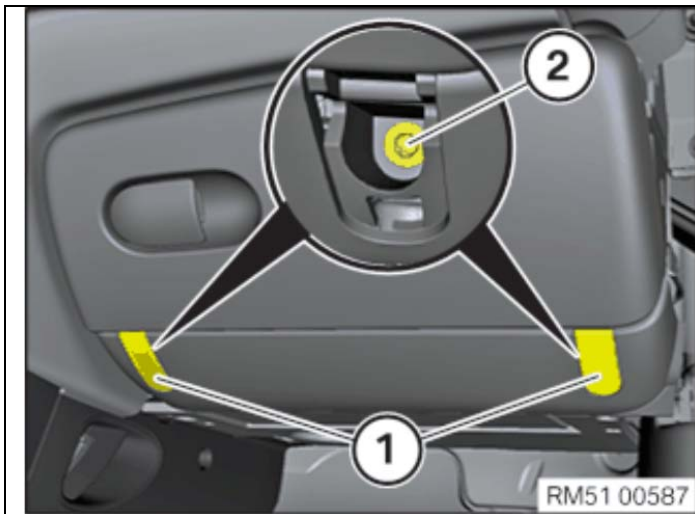


- Lever out covers (1) and release screws (2) underneath.

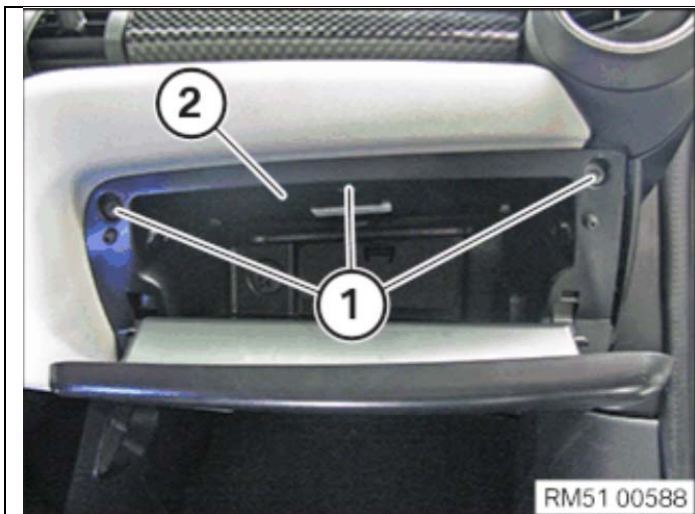


- Release screws (1).
- Remove glove box (2) inwards and disconnect associated plug connections.

Removing and installing (replacing) side centre console trim panel

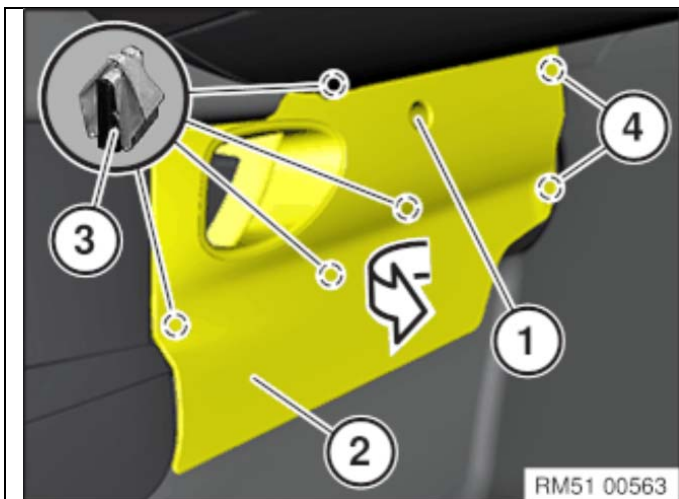


- Release screw (1).
- Release side centre console trim panel (2) from retaining clips (3).
- Feed outside centre console trim panel (2) from guides (4) and remove.

Removing and installing (replacing) function carrier on instrument panel trim

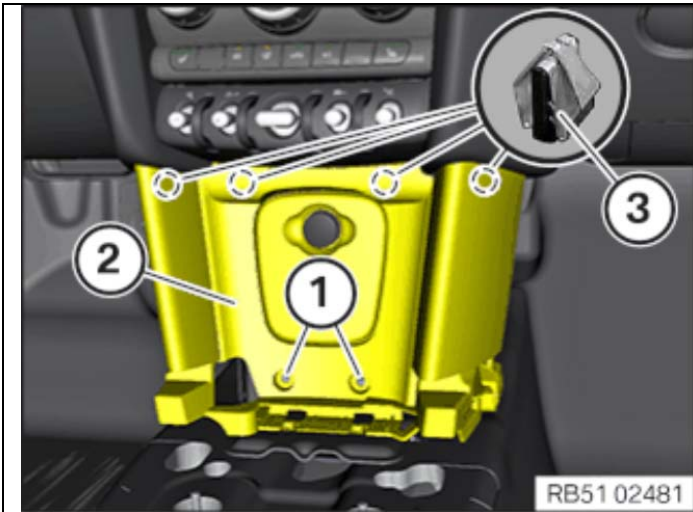

- Release screws (1).
- Release function carrier (2) from clamps (3).
- Unlock associated plug connections and disconnect.
- Remove function carrier (2).

Removing and installing/replacing complete centre console

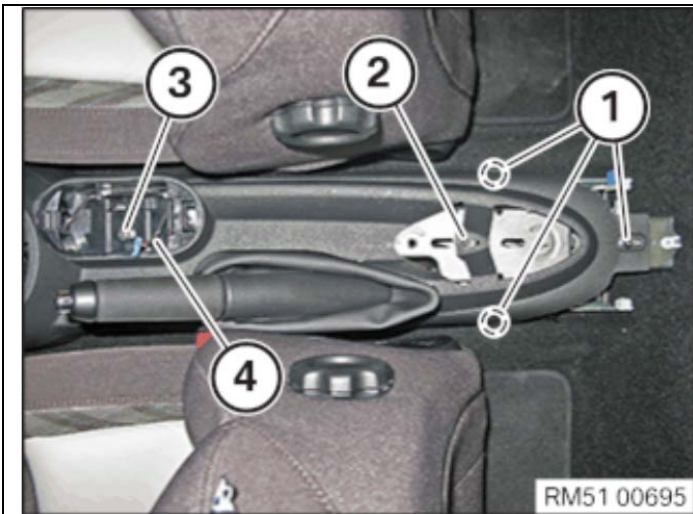


- Release screws (1).

Additionally for version with centre armrest:


- Release screw (2).

Additionally for version with controller:

- Release screw (3) and feed out connector (4).

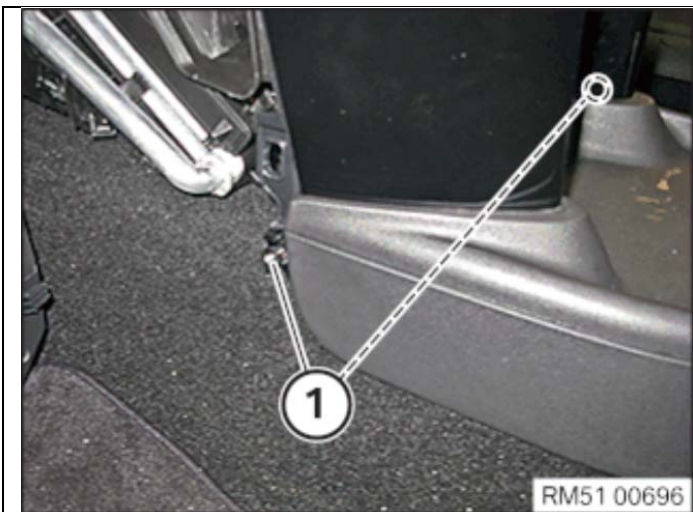


- Release left and right screws (1).

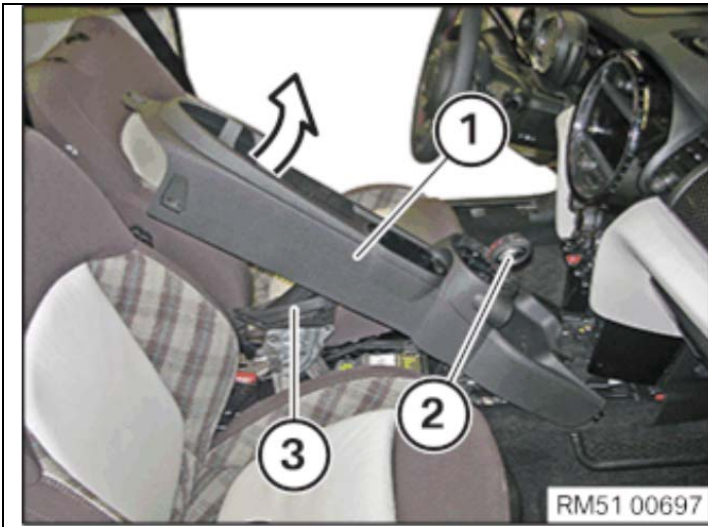


- Raise centre console (1) at the rear and feed out selector lever or gearshift lever (2) and gaiter (3).
- Remove centre console (1) to the rear/top.

Removing and installing (replacing) lower left instrument panel trim

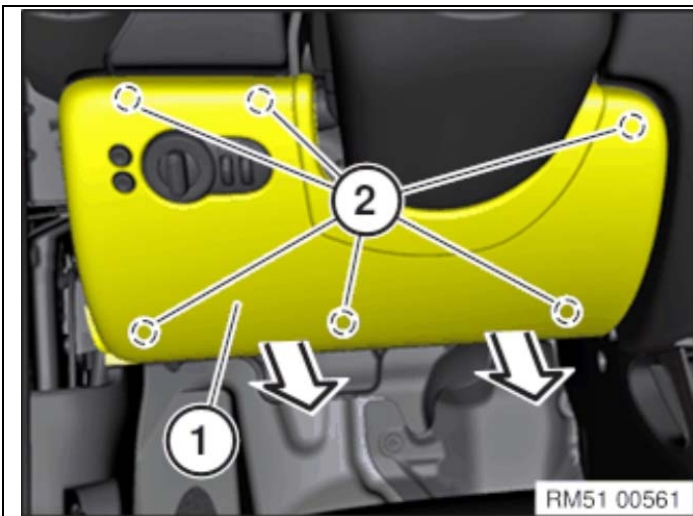


- Unclip the bottom instrument panel trim cover (1) from retaining clips (2) and remove.
- Unlock associated plug connections and disconnect.
- Remove bottom instrument panel trim (1).

Removing and installing/replacing steering column shroud upper section

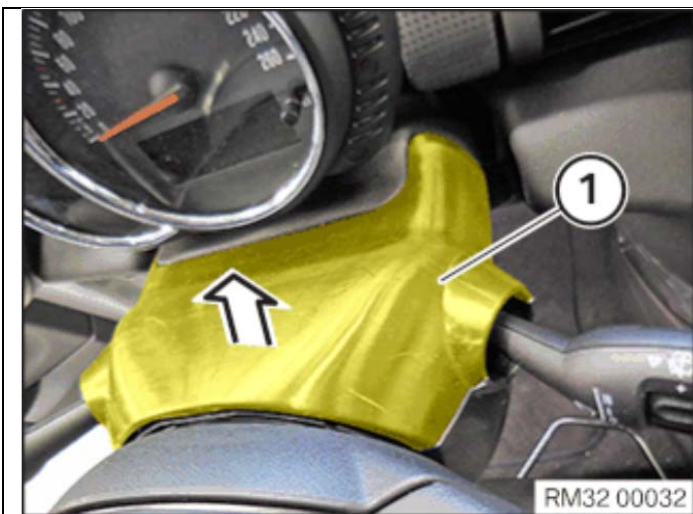


- Unclip steering column shroud (1) in upward direction.

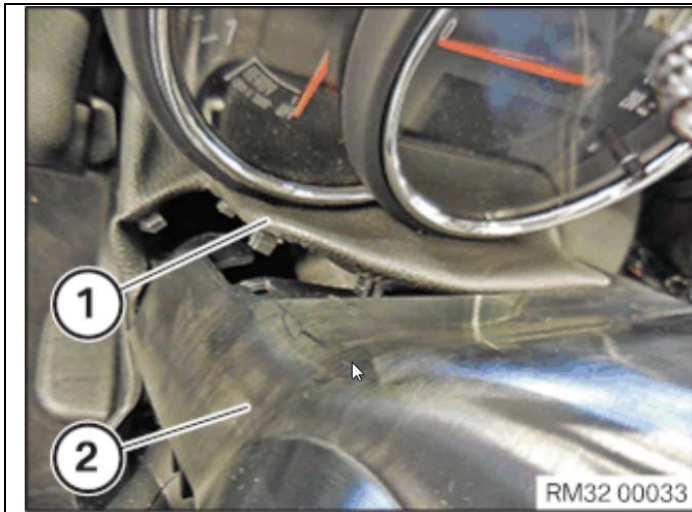


- Unclip trim (1) from steering column shroud (2).
- Remove steering column shroud.


Removing and installing (replacing) steering column switch cluster

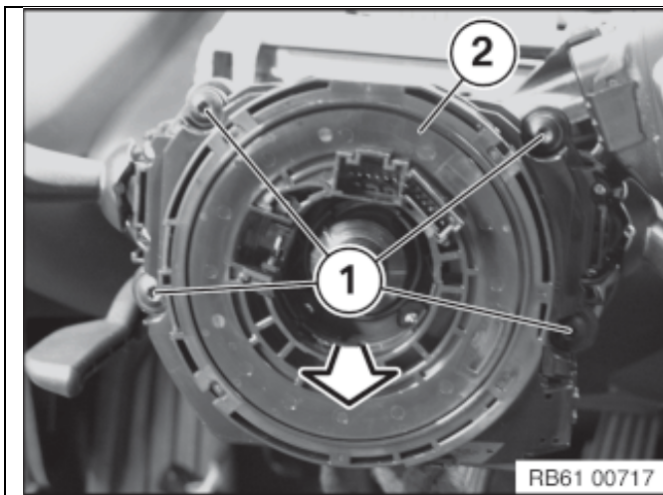

- Release screws (1).
- Remove steering column switch cluster (2) in direction of arrow.

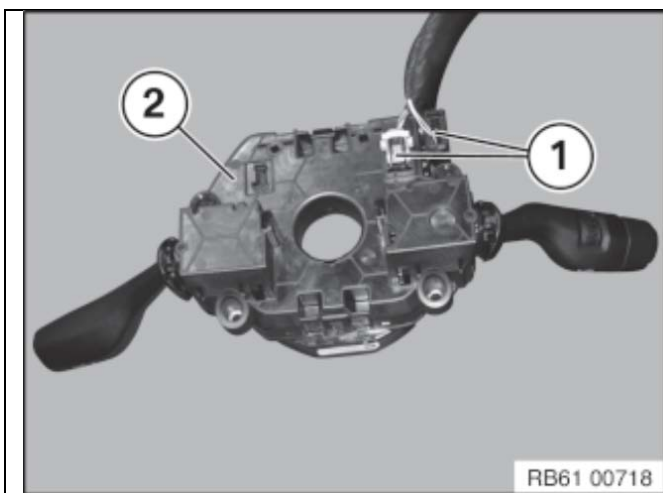


- Unlock and disconnect connector (1) on steering column switch cluster (2).

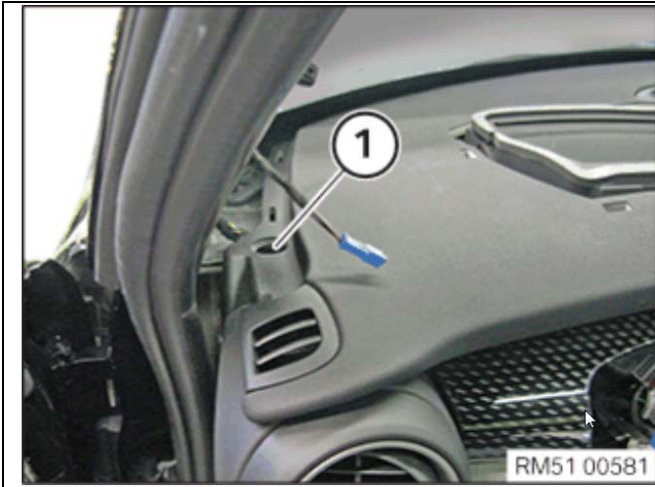


- Release screw (1).

Note:


- Carry out work on the right side in the same way as for the left side illustrated here.

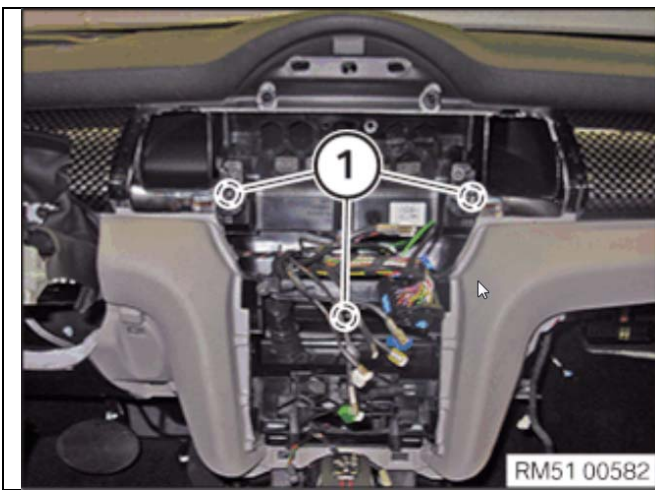

- Release screws (1).

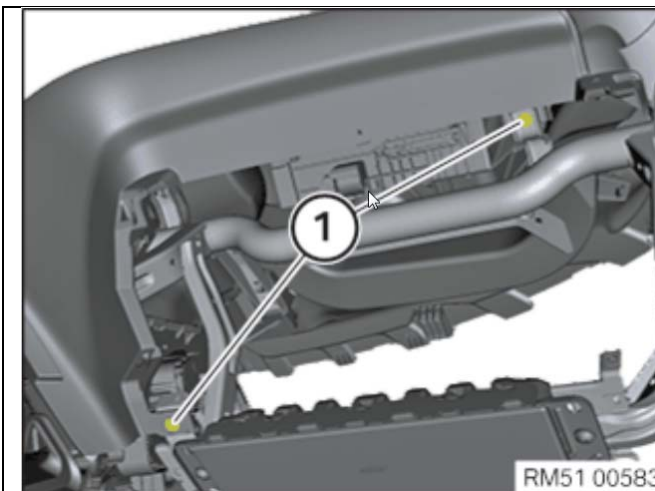


- Release screws (1) on passenger's side.

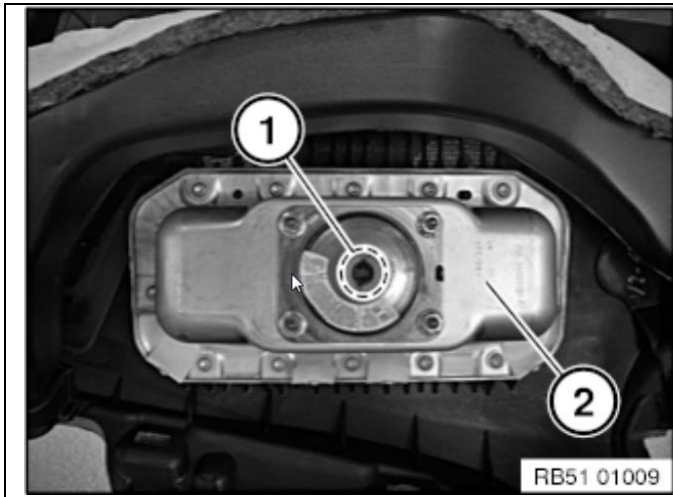


Note:

- Shown removed here for purposes of clarity. Wiring harness is therefore not included in graphic.
- Disconnect plug connection (1) from front passenger airbag (2).
- (Observe notes regarding [Airbag plug connections](#)).

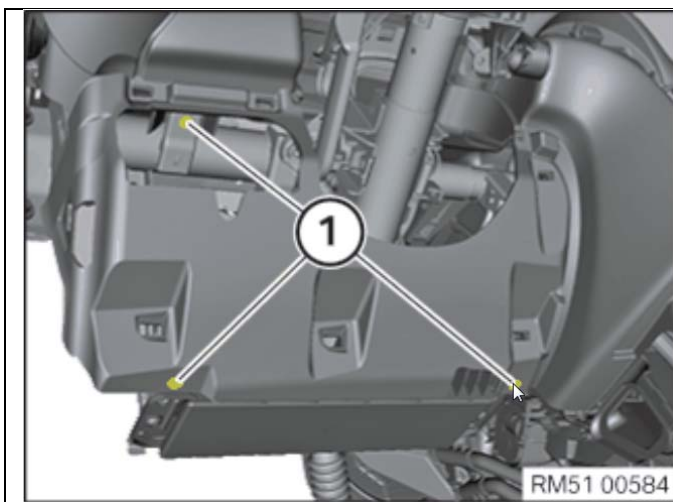

- Release screws (1) on driver's side.

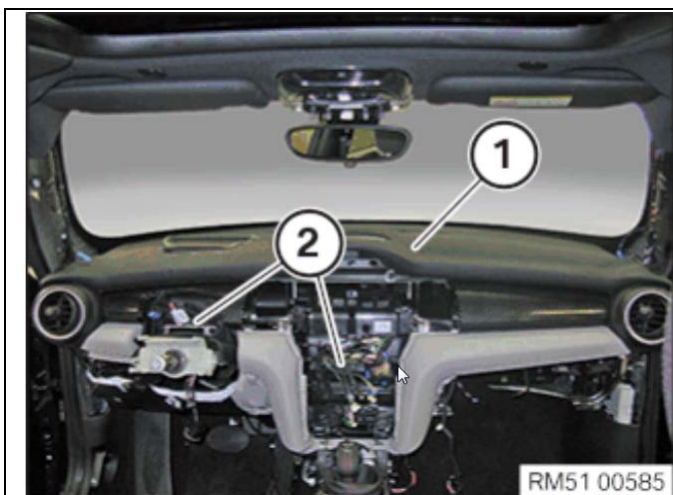

- Remove instrument panel (1) with the aid of a second person and feed out all electrical lines (2).


Main Work:

Removing and installing or replacing airbag module on passenger's side



- Release all screws on airbag module.
- Remove airbag module from dashboard.

Installation:

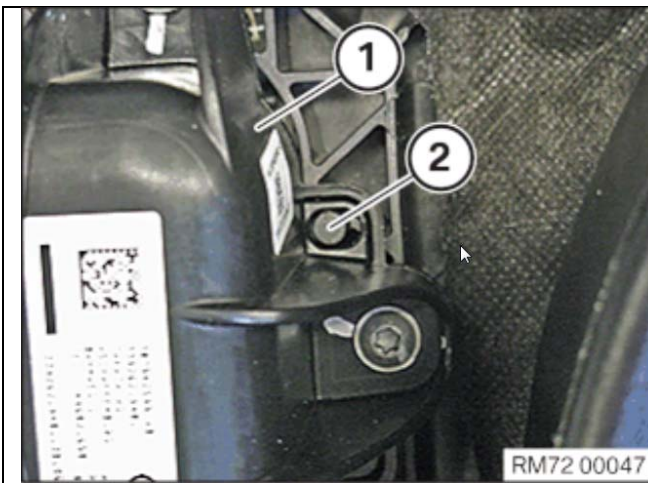

- Install airbag module (1) in instrument panel.

Note:

- Make sure airbag module (1) is correctly fitted on guide (2).



- **Tighten all screws** on airbag module.

Tightening torque: 2,7 Nm

- Re-install instrument panel trim panel
- Re-install instrument panel storage compartment
- With ISTA clear all faults