

B46 Engine

4. Cooling System

There is a visible filling level indicator in the expansion tank. The filling level can be read when the tank is open. The filling level should be between maximum and minimum for correct filling.

4.6. Coolant

The familiar coolant with a silicone base is used. The coolant is not subject to a change interval. The filling is designed for the entire service life of the engine. For work which requires an opening of the cooling circuit the coolant must be replaced. The precise procedure for ventilating the cooling circuit can be found in the current repair instructions.



The cooling system must only be filled with BMW-approved coolant. If the wrong coolant is used, damage to the coolant pumps, coolant hoses, radiators and cylinder head gasket may subtly creep in.
