



OPERATING INSTRUCTIONS

RADIO BOOST CD



OVERVIEW

RADIO

SATELLITE RADIO*

USB/AUDIO INTERFACE*

OVERVIEW



FUNCTION BUTTONS FOR MENU NAVIGATION
Select the displayed function

SELECT STATION/TRACK
Radio: next/previous station
CD: next/previous track



DISPLAY

Tuner FM1 Hit Radio ST 14:23
1v 2 3 4 5 6 FM AM SET SC



CALL UP SETTINGS
Tone control and volume adjustment

SELECT FUNCTIONS



SELECT STATION MANUALLY

DISPLAY TIME



SELECT AUDIO SOURCE
Radio, CD player, CD changer*, external audio device, Satellite radio*

SELECT MENU

Settings, telephone*, computer*



EJECT CD

CD SLOT



**ON/OFF
SELECT VOLUME**
On/off: press
Volume: turn

* indicates optional or country-specific equipment and optional accessories, as well as equipment and functions not yet available at the time of printing.

Your MINI Dealer is always happy to answer any questions you may have.

© 2007 Bayerische Motoren Werke Aktiengesellschaft
Munich/Germany
Reprinting, including excerpts, only with the written consent of BMW AG, Munich
Order No. 01 41 2 600 182
US English XII/07
Printed in Germany

OVERVIEW

RADIO

SATELLITE RADIO*

USB/AUDIO INTERFACE*

RADIO

RADIO

SATELLITE RADIO*


USB/AUDIO INTERFACE*

SWITCH OVER TO RADIO



Press briefly → Press briefly


SELECT WAVEBAND/MEMORY AREA

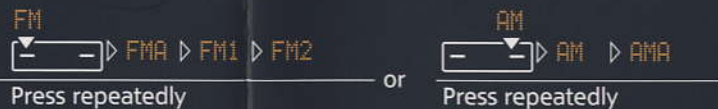

Press repeatedly or Press repeatedly

FM: FM1, FM2, FMA
AM: AM, AMA

SELECT STATION

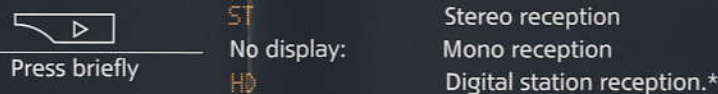

With High Definition Radio: change programs

Press briefly


SELECT STATION MANUALLY



Enter frequency with function buttons or rotary knob.

Press briefly → Press briefly or Press briefly → Turn


STORE CURRENT STATION

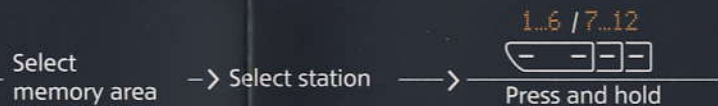

Six stations can be stored per memory area.

Select memory area → Select station → Press and hold

STORE AUTOMATICALLY

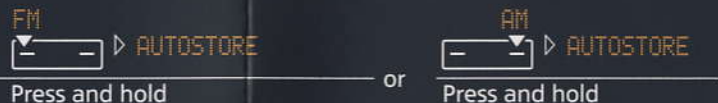

The 6 stations with the strongest reception are stored.

Press and hold or Press and hold

CALL UP STORED STATIONS



Call up stored stations

Select memory area → Press briefly or Turn

BRIEFLY PLAY STATIONS ON/OFF



Briefly sample all receivable stations.

Press briefly

RDS ON/OFF



Transmits additional information in the FM waveband, e.g. station name.

Press briefly → Press briefly

HIGH DEFINITION RADIO ON/OFF*



Receive additional digital radio stations.

Press briefly → Press briefly

PROGRAM TYPE ON/OFF*



Reception of additional information

Press briefly → Press briefly

Additional information on current track. INFO button (with right arrow) → Press briefly

SATELLITE RADIO*

SATELLITE RADIO*

USB/AUDIO INTERFACE*

SWITCH OVER TO SATELLITE RADIO



DISPLAY CATEGORY



SELECT CATEGORY



SELECT AND ACTIVATE CHANNELS

Channels must be activated in order to receive them.



STORE CHANNEL

Memory areas: SAT 1, SAT 2




CHANGE CHANNELS




DISPLAY INFORMATION

Name of channel and additional information on current track.

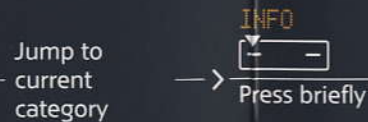

BLOCK CHANNELS

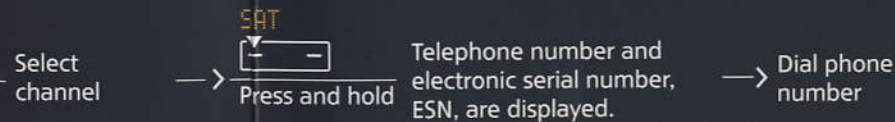

You can receive over 100 different channels of high sound quality. The channels are offered in predefined packages. To receive the channels of your choice, you must have this package activated.

Signal failures can occur with this new technology, resulting in interruptions in playback.

USB/AUDIO INTERFACE*

USB/AUDIO INTERFACE*

SWITCH OVER TO IPOD/USB DEVICE
 
 Press briefly > Press briefly


SELECT NEXT TRACK
 or 
 Press briefly or Turn

FORWARD/REVERSE



 Press and hold

RANDOM ORDER ON/OFF



 Play all tracks of current folder in random sequence.
 Press briefly


CALL UP INFORMATION

 Display any stored information about current track.
 Press briefly

SELECT TRACK
  
 Select desired category, LIST (play lists), GEN (genre), ART (artist), ALB (album)
 Press briefly > Turn > Press briefly

 Open folder
 or  Close folder
 About current track

 Press briefly

ADJUST IPOD VOLUME
  
 Adjust volume of audio sources of the car radio.
 Press briefly > Turn > Press briefly

DISPLAY FILE STRUCTURE OF USB DEVICE

 Folders without music files are also displayed.
 Press briefly

USB DEVICE OPERATING DISPLAYS

EMPTY USB	No USB device connected
LOAD USB	USB device is being read
NOT CONNECTED	USB device has been removed

Current audio files, e.g. MP3, AAC and M3U playlists can be played. Due to the variety of audio devices and iPods on the market, there is no way to guarantee that every audio device and iPod will be operable on the vehicle. Ask your MINI Dealer for further information.
 After the first time USB devices are connected, the track information is transmitted to the vehicle. This can take a little time. The tracks can be displayed if they are in roman letters. The data from up to four USB devices or for approx.


20 000 tracks can be stored in the vehicle. Music tracks with integrated Digital Rights Management (DRM) cannot be played. Depending on the audio files, e. g. bit rates greater than 256 kbit/s, the files may not play back correctly in every case.

SETTINGS

ADJUST VOLUME

SPEED

Speed-dependent volume control

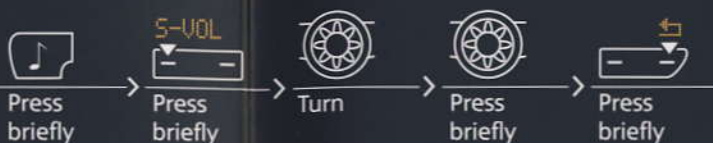

EXTERNAL AUDIO DEVICES

Volume control for external audio devices



ADJUST TONE

Lows (BASS), highs (TREBLE), volume distribution left/right (BALANCE), front/rear (FADER), PDC* volume, CHIME



RESET SETTINGS

Reset BASS, TREBLE, FADER, and BALANCE to medium.



DISPLAY TIME

Time is displayed for approx. 8 seconds with ignition switched off.



SET TIME FORMAT, TIME, DATE

Select format (12/24h), HRS/MIN, DD/MM/YY



CHANGE LANGUAGE/UNITS OF MEASURE



SETTINGS

CD

CD CHANGER*

COMPUTER*


SWITCH OVER TO CD PLAYER/CD CHANGER*



SELECT CD FROM CD CHANGER*



SELECT NEXT TRACK

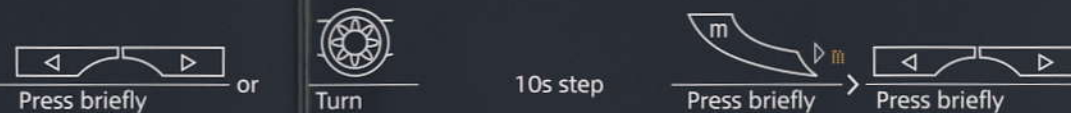

FORWARD/REVERSE



RANDOM ORDER ON/OFF

Play all tracks of a CD in random order.



BRIEFLY PLAY TRACKS ON/OFF

Briefly sample all tracks on CD.




SELECT MP3 TRACK



DISPLAY MP3 TRACKS

Display information on current track.

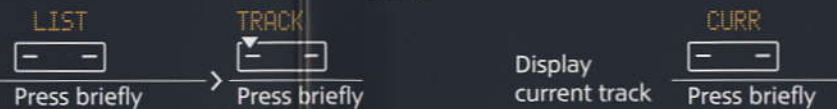

OPERATING DISPLAYS

CD PLAYER

- INSERT CD CD slot is empty
- ERROR CD CD cannot be played or is defective
- TEMP CD Operating temperature too high

CD CHANGER*

- INSERT CD CD inserted incorrectly or empty
- INSERT MAG No CDs in changer
- LOAD MAG Contents of CD are read in
- TEMP CDC Operating temperature too high

! Do not operate CD-player with damaged cover, as otherwise serious eye injuries can result.
Do not use CDs with labels applied after purchase, as these labels can come off during playback and damage the system. Only use round CDs with a standard diameter of 4.7 in (12 cm) and do not play CDs with an adapter, e.g. single CDs, as otherwise the CDs or the adapter may jam. Malfunctions, e.g. skipping, can

occur when self-recorded CDs are used. Do not use combined CD/DVDs, as otherwise these may jam. CDs with copy protection may only permit restricted playback. In this case, contact the dealer or manufacturer of the CD.

CD CHANGER*

CD CHANGER*

INSERT INDIVIDUAL CD

The changer is in the glove compartment.



Press briefly



Press briefly (1 - 6)

When LEDs on the CD bay flash, insert individual CD.

FILL EMPTY CD COMPARTMENTS

Only insert CD if LEDs on CD bay are flashing; otherwise you may damage the CD or the CD changer.



Press and hold

LEDs of all free positions flash.

When LEDs on the CD bay flash, insert individual CD.

EMPTY CD CHANGER



Press briefly



Press briefly (1 - 6)

EMPTY CD CHANGER COMPLETELY



Press and hold

COMPUTER*

COMPUTER*

DISPLAY INFORMATION

Display fuel consumption, range, outside temperature and average speed.



Press briefly

COMP



Press briefly

RESTART CALCULATIONS

Restart calculation of range and average speed.



Press briefly

COMP



Press briefly

AV.CON / AV.SPD



Press briefly

RESET



Press briefly

Display is set to "zero"

DISPLAY MINI PHONE NUMBERS*



Press briefly

MINI



Press briefly



Turn



HEAR ME.

01 41 2 600 182 ue

SETTINGS

CD

CD CHANGER*

COMPUTER*