



Unlock catches (1) and remove cover (2).

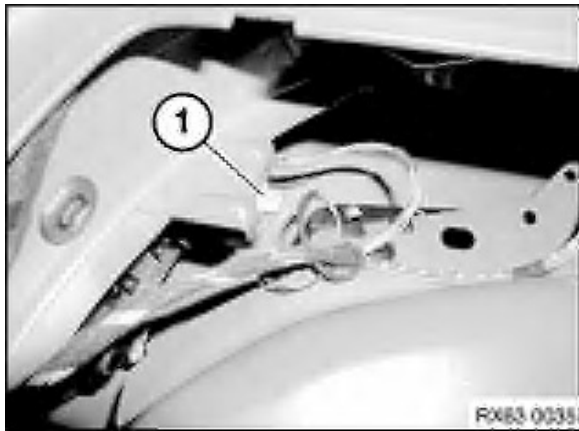


Release nut (1) of rear light.

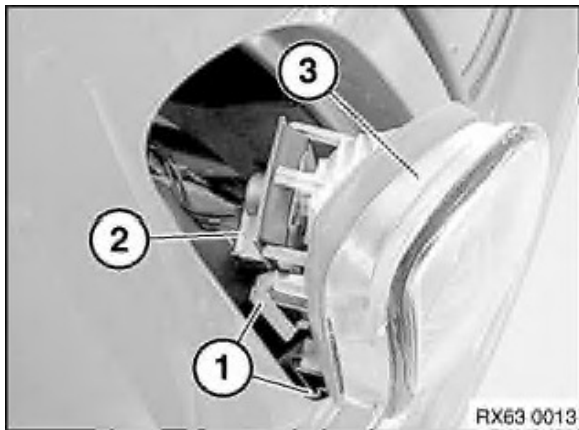

Release retaining clips (1) and remove rear light (3) from side panel.

Unfasten plug connection (2) and disconnect.

Remove rear light (3).

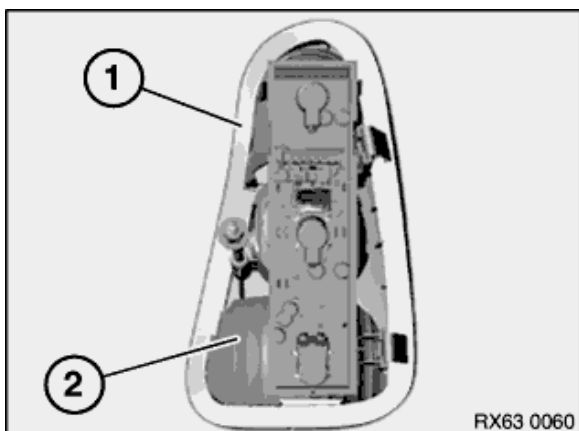

*Installation:*

Make sure sealing frame (1) is correctly seated on rear light (2).

If necessary, replace sealing frame (1).