


Necessary preliminary tasks:

Remove underbody protection.


Note:

After completing work, bleed clutch hydraulic system.

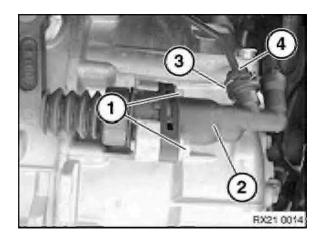

Release screws (1) and remove clutch slave cylinder (2). Remove clip (3) and disconnect line (4).

Tightening torque 21 52 1AZ .

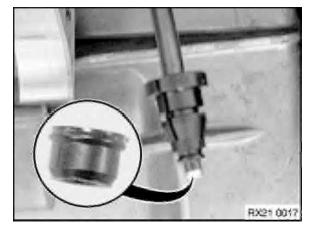

Installation:

After removing clutch slave cylinder, check whether sealing ring is seated in line holder.

A click must be heard when the line holder is inserted in the clutch slave cylinder.

Mount clip.

Bleed clutch hydraulic system.