

31 31 Spring Struts

	Type	Thread	Tightening specification	Measure
1AZ Spring strut support bearing to body	R55, R56	M8	Replace nuts	34 Nm
2AZ Spring strut support bearing to spring strut shock absorber	R55, R56	M14	Replace nut	64 Nm
3AZ Spring strut shock absorber to pivot mount	R55, R56	M12	Tighten only via screw!	81 Nm

33 52 Shock Absorbers

	Type	Thread	Tightening specification	Measure
1AZ Spring strut shock absorber to trailing arm	R55, R56	M14		165 Nm
2AZ Spring strut support bearing to body	R55, R56	M10	Replace screws	56 Nm
3AZ Spring strut support bearing to spring strut shock absorber	R55, R56	M10	Replace nut	30 Nm

33 55 Stabilizer Bar

	Type	Thread	Tightening specification	Measure
1AZ Stabilizer link to stabilizer	R55, R56	M10	Replace nut	56 Nm
2AZ Stabilizer link to trailing arm	R55, R56	M10	Replace nut	56 Nm
3AZ Retaining bracket, stabilizer bar to rear axle support	R55, R56	M8		19 Nm

33 32 Control Arms and Struts

	Type	Thread	Tightening specification	Measure
1AZ Upper control arm to trailing arm	R55, R56	M12	Replace nut tighten in normal position	100 Nm
2AZ Lower control arm to trailing arm	R55, R56	M12	tighten in normal position	100 Nm
3AZ Control arm to rear axle carrier	R55, R56	M12	Replace nut tighten in normal position	100 Nm
4AZ Holder, trailing arm to trailing arm	R55, R56	M14	tighten in normal position	165 Nm
5AZ Holder, trailing arm to body	R55, R56	M12		100 Nm