

ORIGINAL BMW ACCESSORIES. INSTALLATION INSTRUCTIONS.



Decorative finisher set with pad retrofit MINI (F56)

Retrofit kit number

51 14 2 347 948	Decorative finisher set with pad
51 14 2 339 313	Decorative finisher set with pad
51 14 2 347 947	Decorative finisher set with pad
51 14 2 352 625	Decorative finisher set with pad
51 14 2 352 626	Decorative finisher set with pad
51 14 2 355 376	Decorative finisher set with pad
51 14 2 355 377	Decorative finisher set with pad
51 14 2 355 379	Decorative finisher set with pad

Installation time

The installation time is **approx. 0.5 hours**. This may vary depending on the condition of the car and the equipment in it.

The installation time shown does not include any time spent on programming / coding.

The calculation of the total costs for the programming time must be factored into the calculation of retrofitting costs (no charges may be made through the warranty).

Important information

These installation instructions are primarily designed for use within the BMW dealership organisation and by authorised BMW service companies.

In any event the target group for these installation instructions is specialist personnel trained on MINI cars with the appropriate specialist knowledge.

All work must be completed using the latest BMW repair manuals, wiring diagrams, servicing manuals and work instructions, in a rational order, using the prescribed tools (special tools) and observing current health and safety regulations.

If you experience installation or function problems, restrict troubleshooting to approx. 0.5 hours for mechanical work and 1.0 hour for electrical work.

To avoid unnecessary extra work and/or costs, send an inquiry straight away to the technical parts support team via the Aftersales Assistance Portal (ASAP).

Quote the following information:

- Vehicle identification number,
- Retrofit kit part number,
- A detailed description of the problem,
- Any work already carried out.

Do not archive the hard copy of these installation instructions since daily updates are provided via ASAP!

Pictograms

 Denotes instructions that draw your attention to dangers.

 Denotes instructions that draw your attention to special features.

◀ Denotes the end of the instruction or other text.

Installation information

Ensure that the cables and/or lines are not kinked or damaged as you install them in the car. Costs arising from this will not be reimbursed by BMW AG.

Additional cables/wires that you install must be secured with cable ties. If the specified PIN chambers are occupied, bridges, double crimps or twin-lead terminals must be used.

All pictures show LHD cars; proceed accordingly on RHD cars.

Installation is shown only on the left-hand side of the car; proceed in the same way on the right-hand side of the car.

The car may be driven after **approx. 6 hours** and may be taken through a car wash after **approx. 48 hours**.

Ordering instructions

The Betalink is not included in the retrofit kit and must be ordered separately (see EPC for part number and further details).


Special tools required

None

Table of contents

Section	Page
1. Decorative finisher set with pad parts list	4
2. Preparatory work	5
3. Installing the decorative finisher set with pad	6
4. Concluding work and coding	8

1. Decorative finisher set with pad parts list

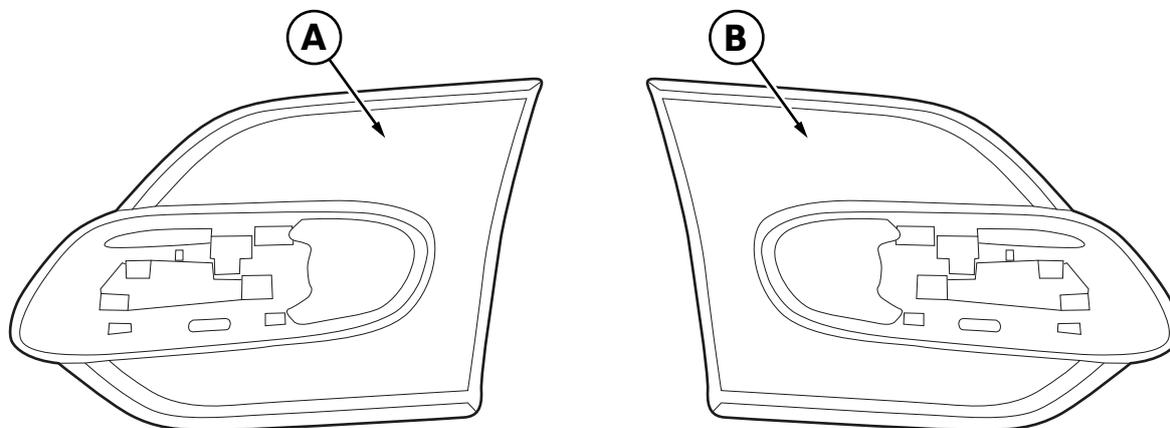

F56 0008 V


Legend

- A** Left decorative finisher
- B** Right decorative finisher

2. Preparatory work


The following components must be removed first of all	ISTA No.
Conduct a brief test	---
Disconnect the negative pole of the battery	12 00 ..
Remove the left and right indicator lights	---

3. Installing the decorative finisher set with pad

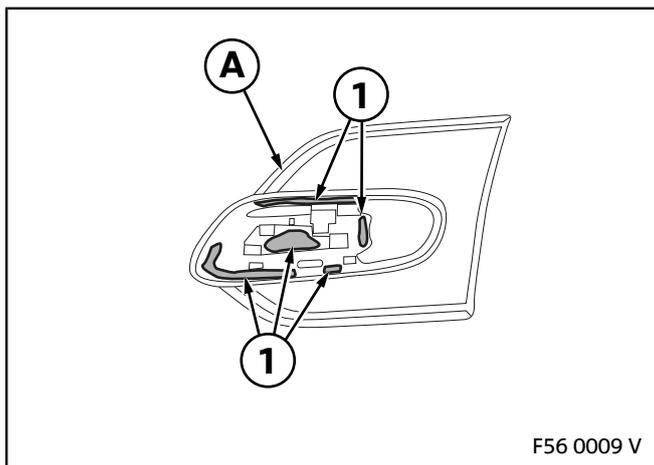


- ▶ The areas being bonded must be completely dry, clean and free from wax or grease. ◀

Apply Betalink (1) as shown on the front of decorative finisher A.

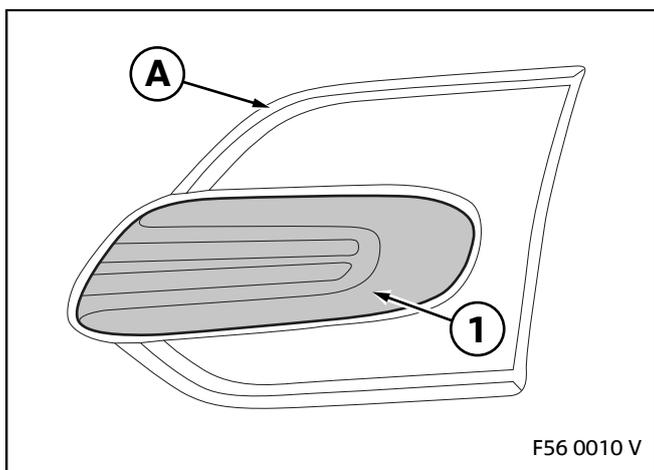


Insert indicator (1) into decorative finisher A and press on firmly until the indicator (1) engages.

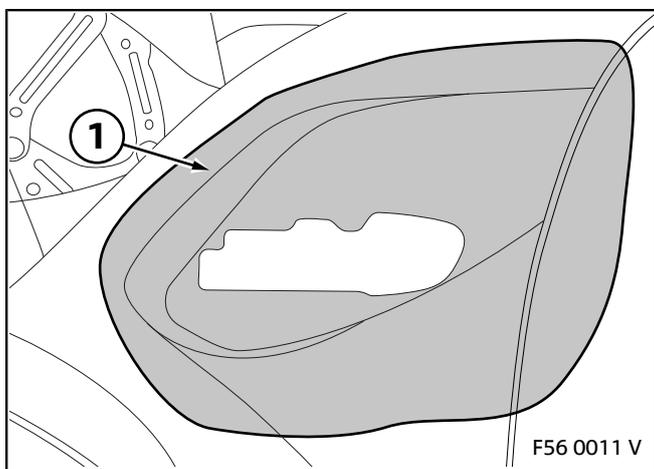

- ▶ The areas being bonded must be completely dry, clean and free from wax or grease. ◀

Clean the bonding surface (1) with suitable agents.

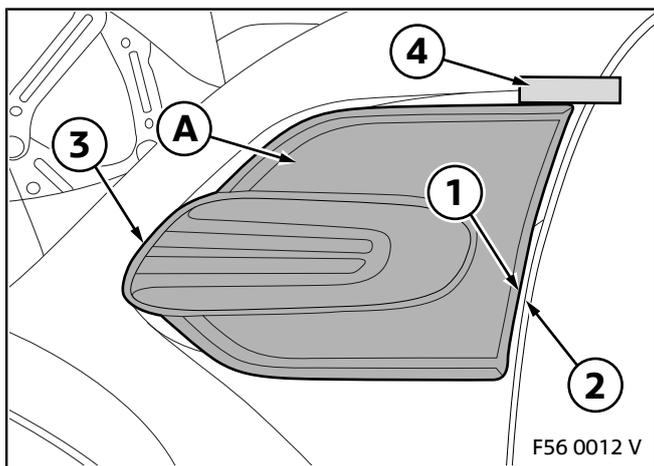

Place decorative finisher A on the wing and position it until the indicator on decorative finisher A is located noticeably low down on the bodywork.


Position edge (1) parallel to edge (2) with a distance of **approx. 2-3 mm**.

- ▶ No gap must be visible at the edge (3). ◀


After positioning, stick on a positioning aid using suitable adhesive tape (4).

Remove decorative finisher A.

3. Installing the decorative finisher set with pad

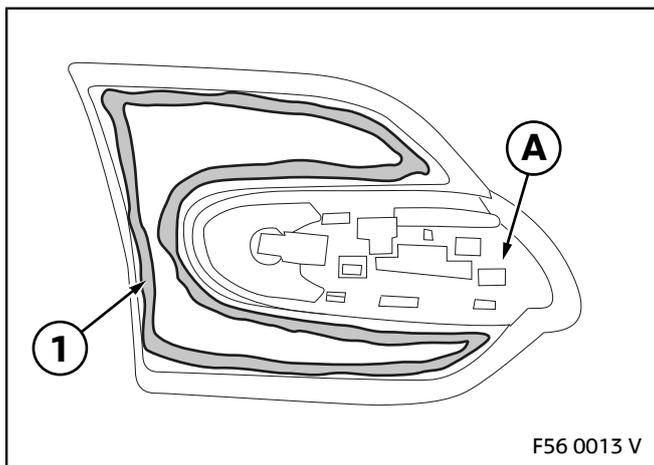

Apply Betalink (1) as shown on the reverse of decorative finisher A.

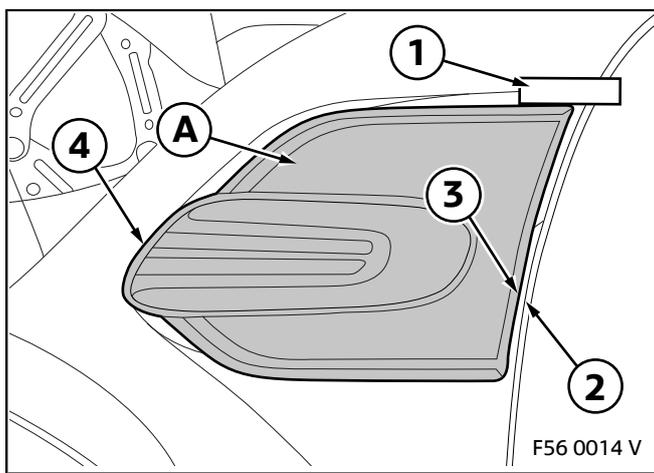


Connect the indicator on decorative finisher A to the indicator cable.

Remove any Betalink that oozes out immediately. ◀

Place decorative finisher A on the wing and, using adhesive tape (1), position it until the indicator on decorative finisher A is located noticeably low down on the bodywork.

The distance from edge (2) to edge (3) must be **approx. 2-3 mm**.

No gap must be visible at the edge (4). ◀

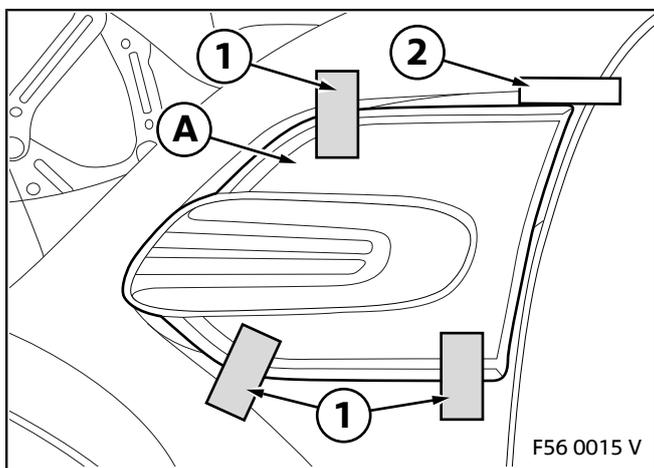

Press decorative finisher A firmly onto the wings.

Secure decorative finisher A using suitable adhesive tape (1).

Remove the adhesive tape (2).

4. Concluding work and coding

The retrofit system does not require coding.

- Connect the battery
- Conduct a brief test
- Conduct a function test
- Re-assemble the car in a logical manner