

VIN: XXXXXXXX Vehicle: MINI/F56/HAT/Cooper/B38/AUTO/USA/LL/2014/11

System Version: 3.47.10.13054 Data Version: R3.47.10.13054

51 41 000 Removing and installing (replacing) front left or right door trim panel



Special tools required:

- [00 9 317](#)




Necessary preliminary tasks:

- Remove [power window switch](#)
- Remove [door entry lighting](#) (F56 only)




REMOVAL:

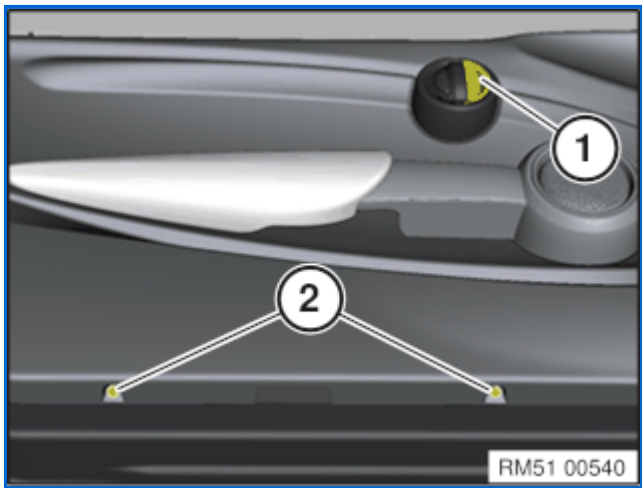

Remove cover (1).  
Unfasten screws (2).



Release screws (1).

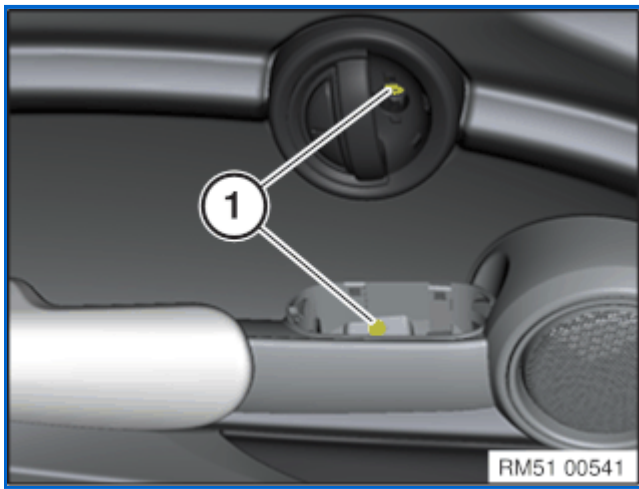

**F55 only:**

Lift off cover.

Release screw (1).

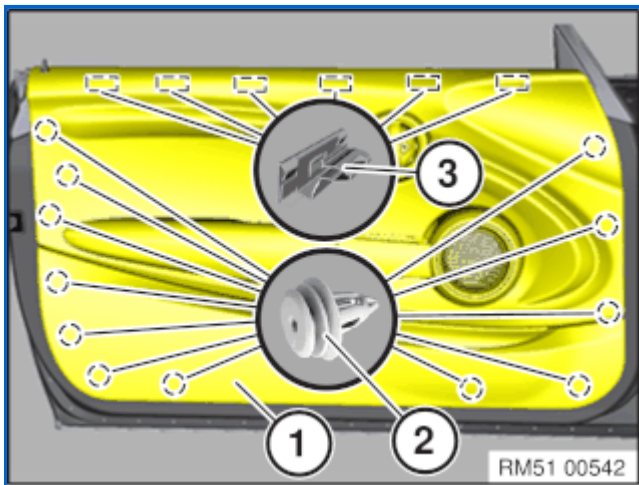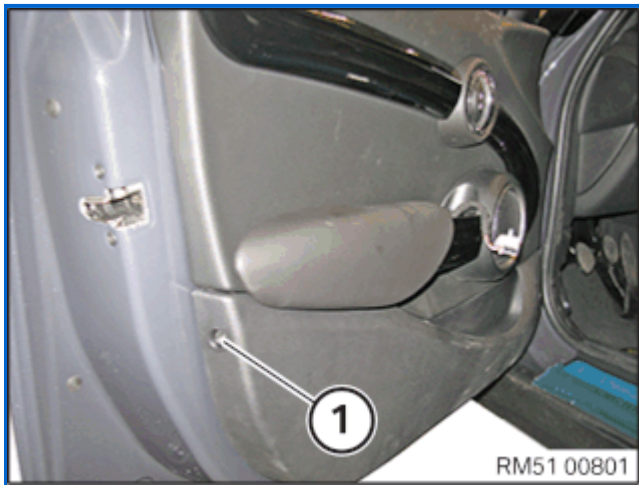


Release door trim panel (1) from clips (2) and clamps (3) with special tool [00 9 317](#).

Detach cable (1) on door lock.


Unlock and disconnect all associated plug connections.

Release associated cable clips.


Remove door trim panel.

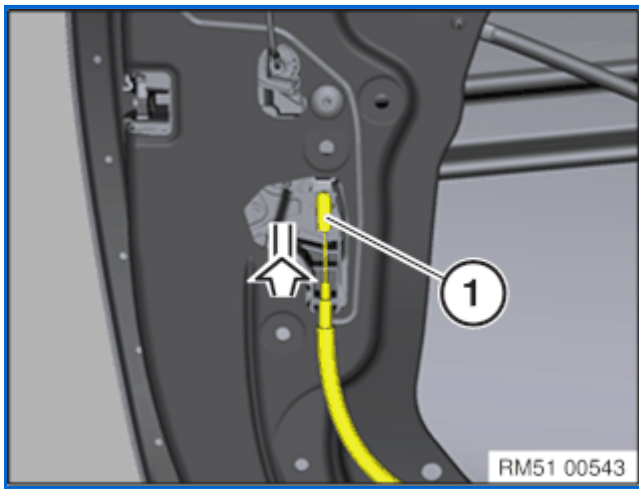

## INSTALLATION:

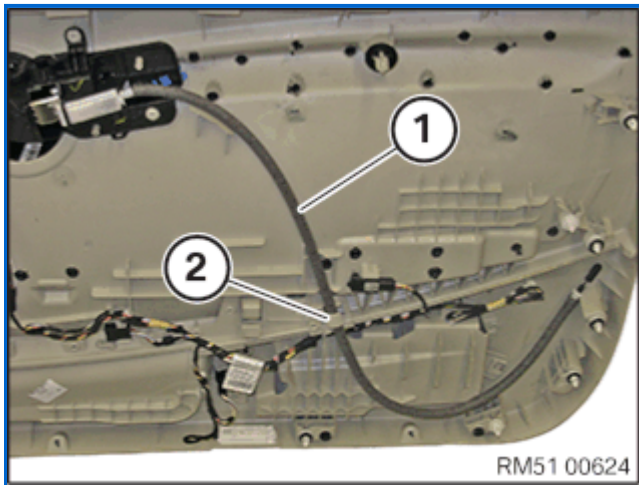

Make sure cable (1) is in correct position in holder (2).

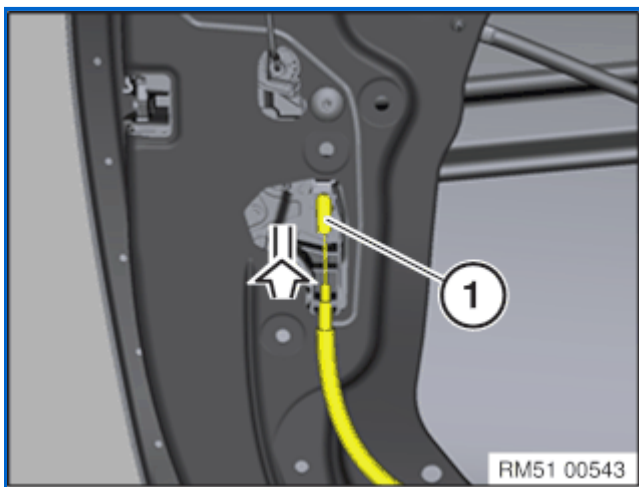



Attach cable (1) on door lock.

Connect all associated plug connections.


Engage door trim panel (1) in clips (2) and clamps (3).

*Note:*

If necessary, replace faulty clips (2) and clamps (3).

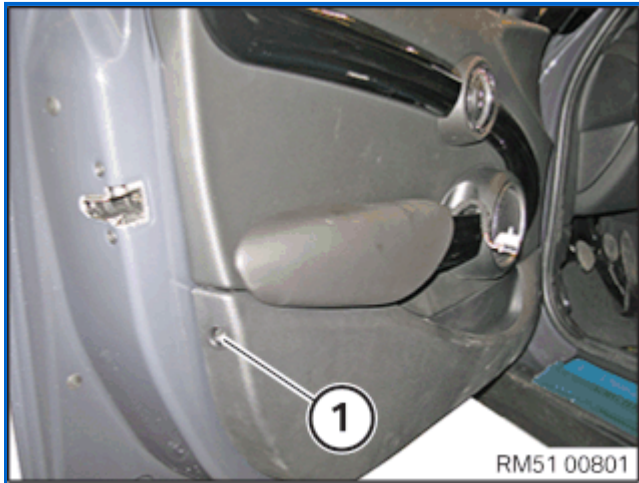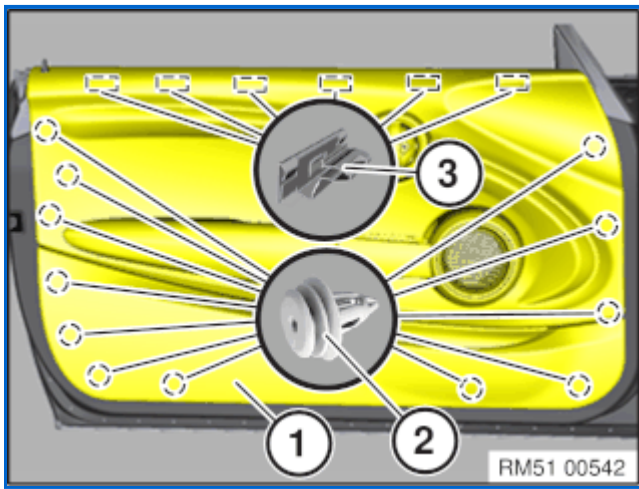


**F55 only:**  
Tighten screw (1).  
Install cover.

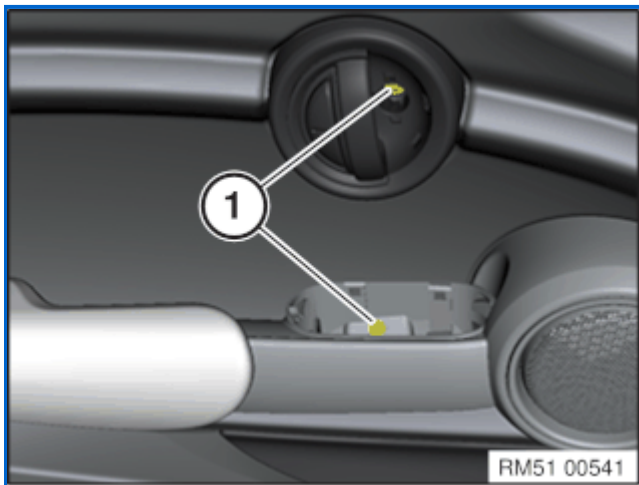

Tighten down screws (1).

Engage cover (1).  
Tighten down screws (2).

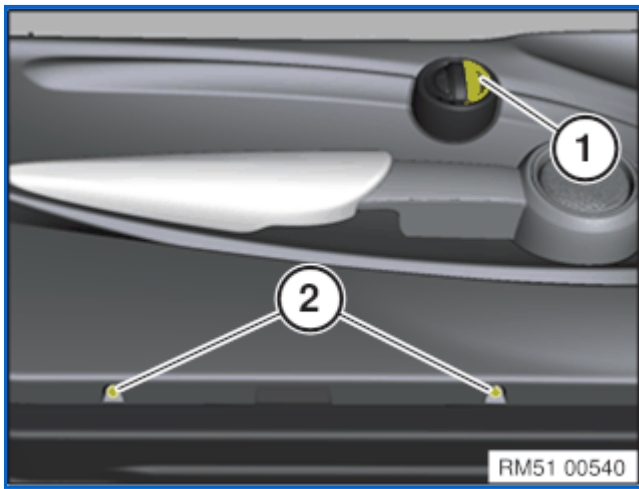

With door open, check function of door opener and outer door handle!



Required reworking:

- Install [door entry lighting](#) (F56 only)
- Install [power window switch](#)